

- 060..
- 065..
- 070..
- 071..
- 072..
- 074..
- 075..
- 076..
- 077..
- 078..
- 120..
- 125..
- 130..
- 131..
- 135..
- 136..
- 137..
- 138..
- 180..
- 181..
- 182..
- 183..
- 184..
- 190..

 
**COMPATIBILITY:**

QTV  
FBLV/FCMV/FMEV  
IRV/VLV  
NI  
DA  
ET



# 1


## Montaggio Assembly

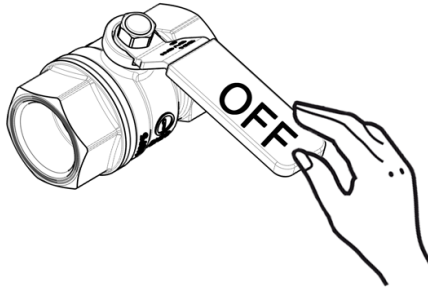

$65 \pm 5^{\circ}\text{C}$



 $15 \pm 5^{\circ}\text{C}$

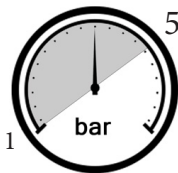


MIN - MAX




OK

# 2 a

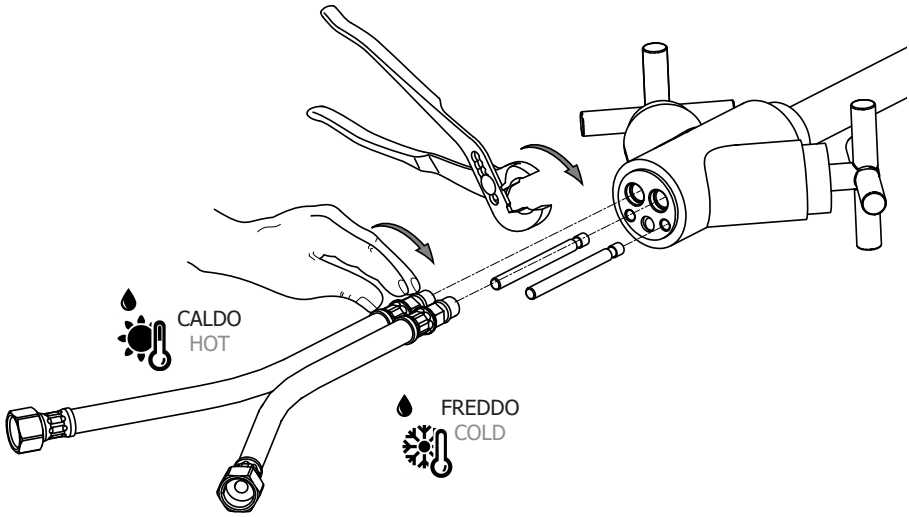 


# b

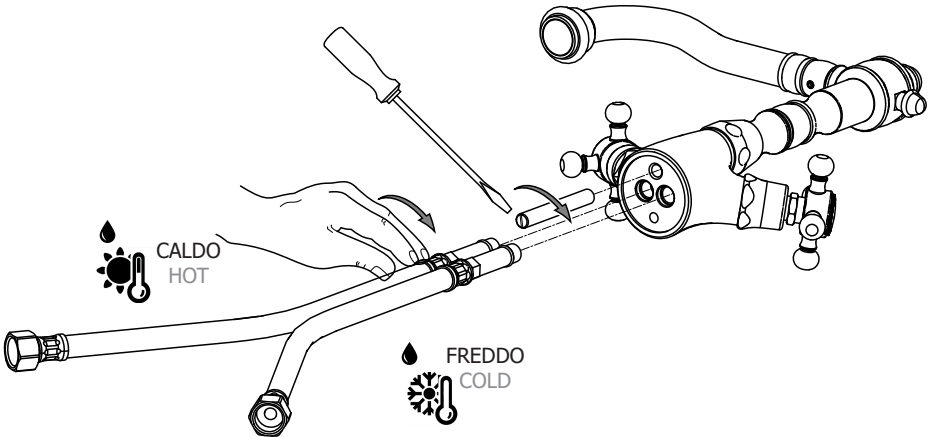 


C

 
QTV

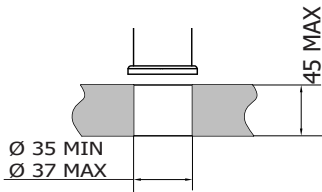


DA  
ET

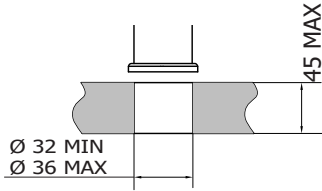 


FBLV  
FCMV  
FMEV

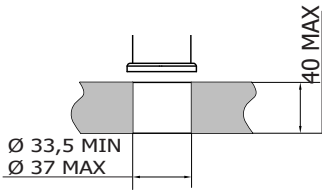 


IRV  
VLV

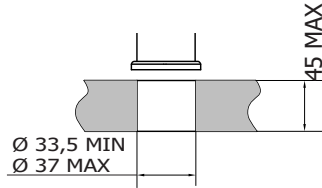 




NI

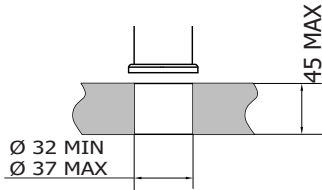 


NI  
072  
074  
076  
078  
180  
182

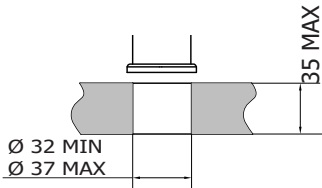 

**3**


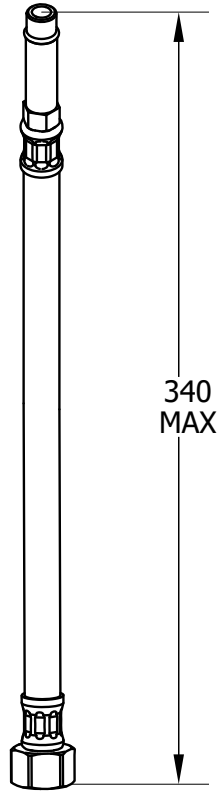 
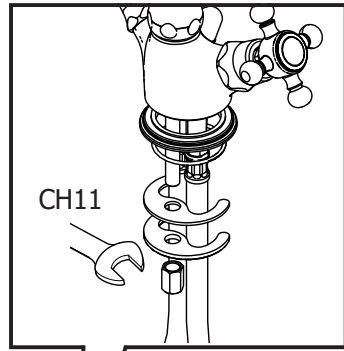 
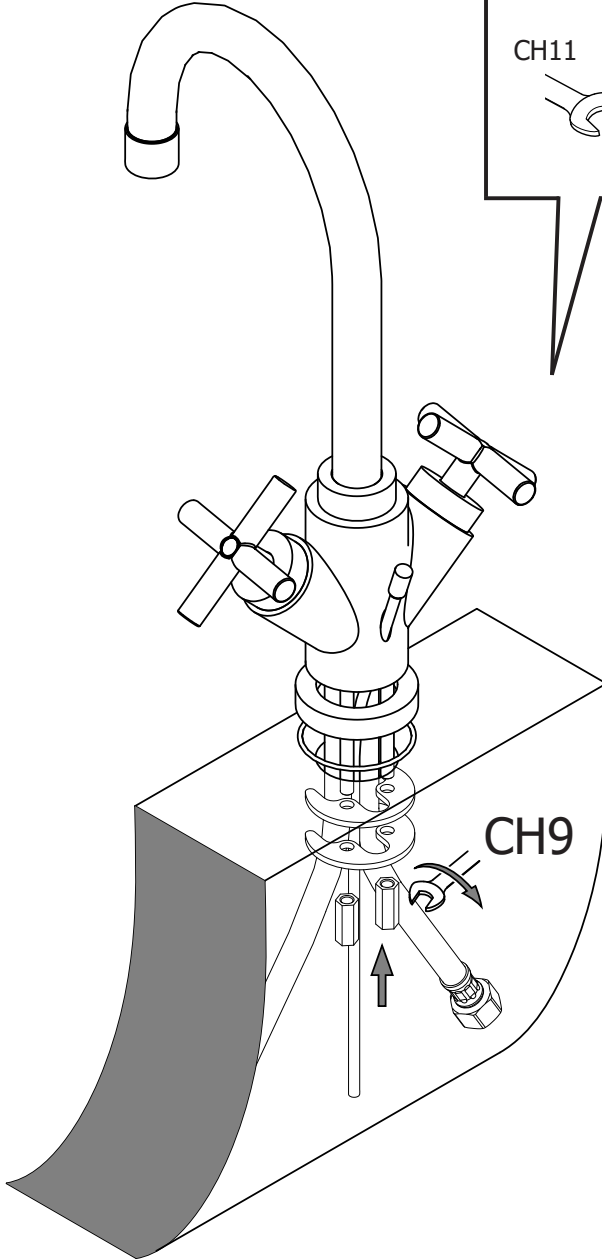 



 
Attacco Lavastoviglie  
Dish Washer Machine Connection

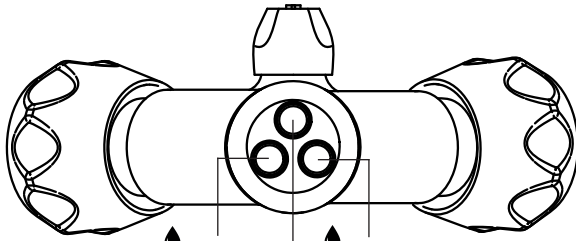


CALDO  
HOT

      FREDDO  
COLD

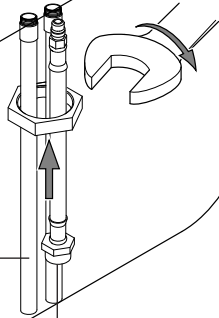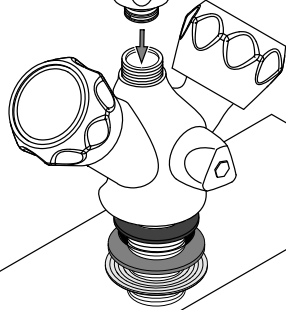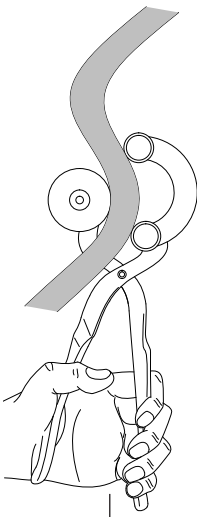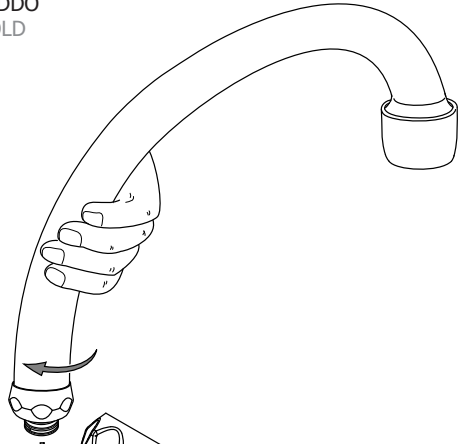


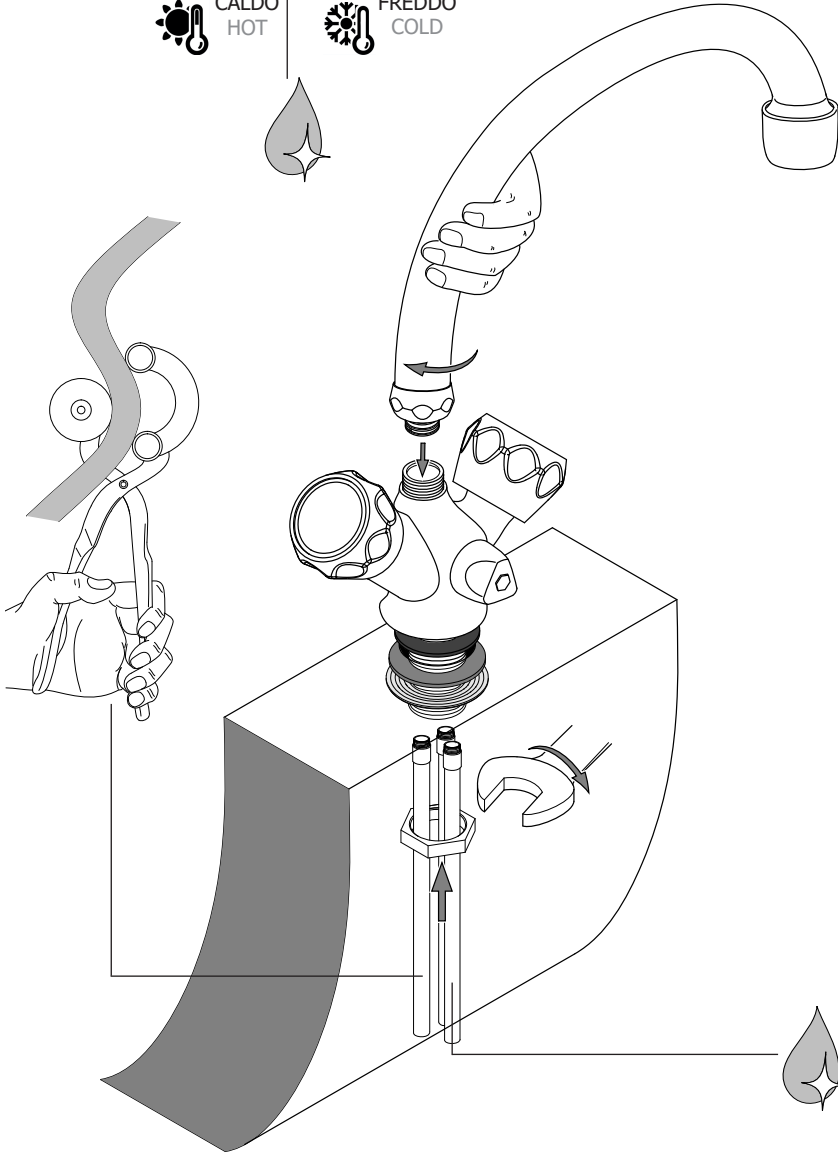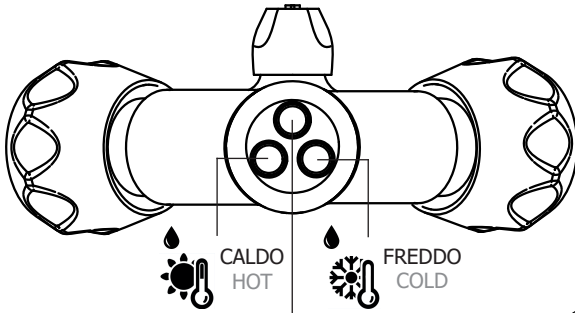


**4 a**

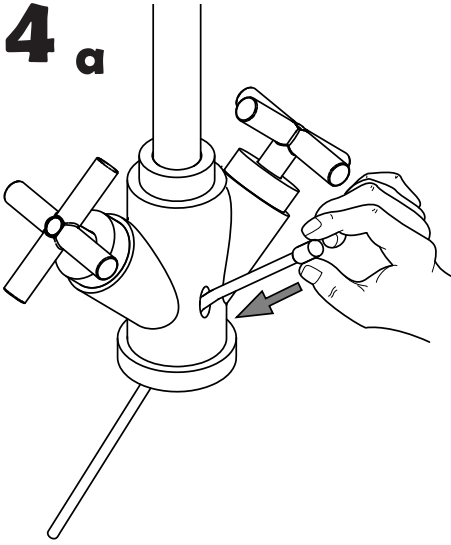 

**b**

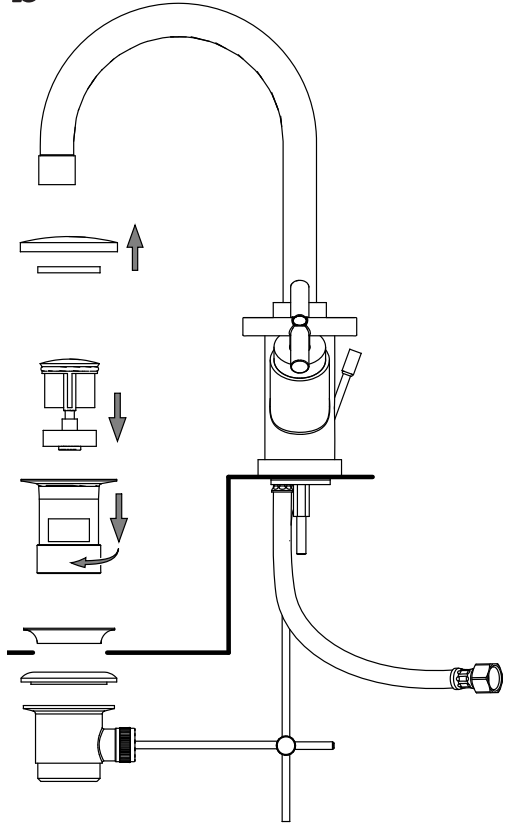 







**c**

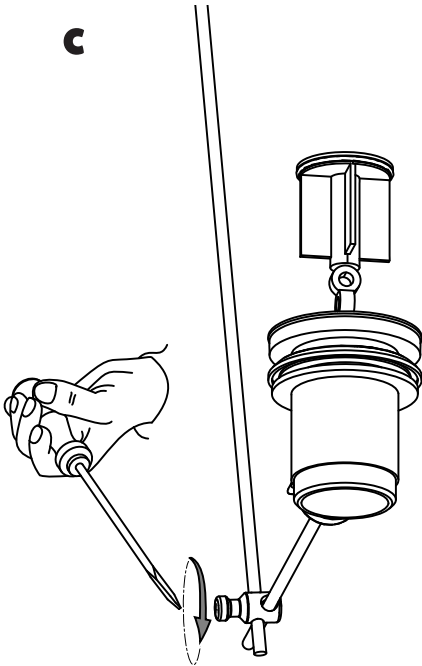 




# M
      
## Manutenzione Service

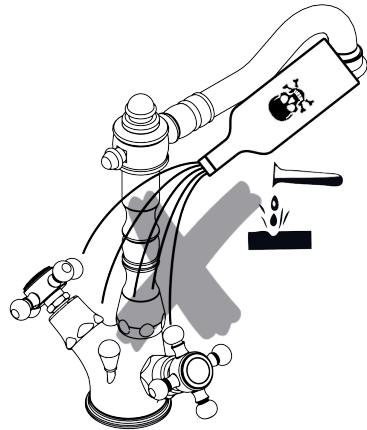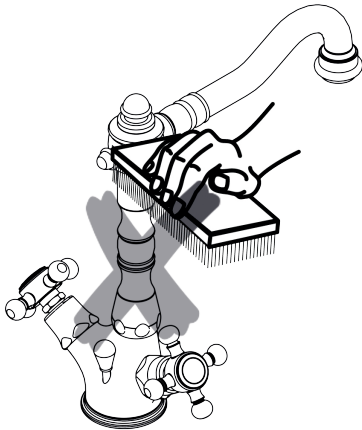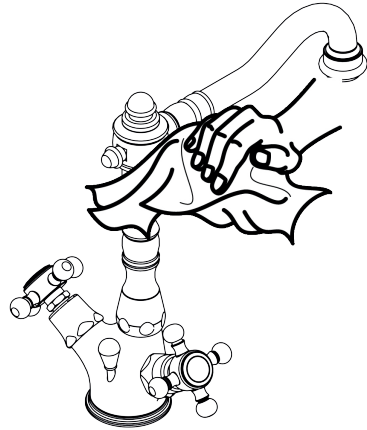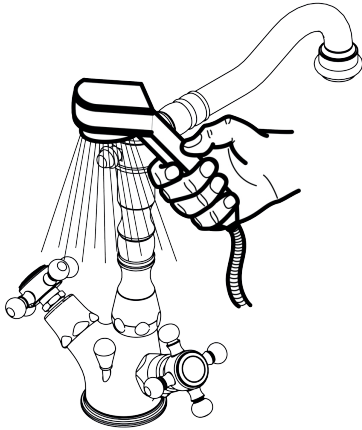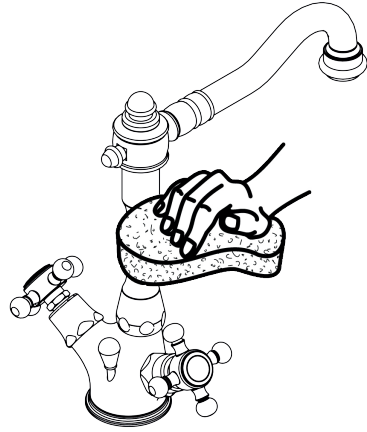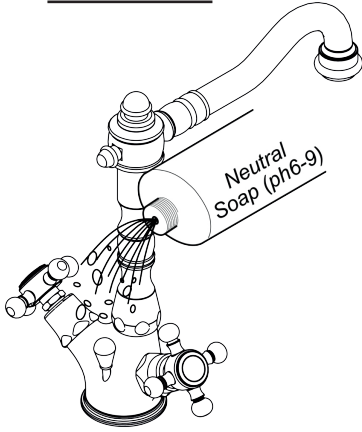

**S a**


 
Sostituzione Vitone  
How to Ceramic Disk Valve

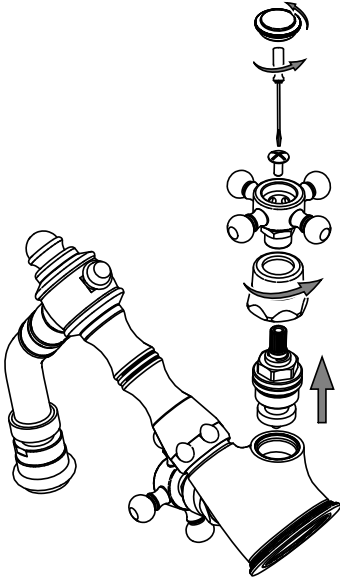**b**

Sostituzione Snodo  
How to replace Joint

**c**

  Sostituzione Aeratore  
How to replace Aerator

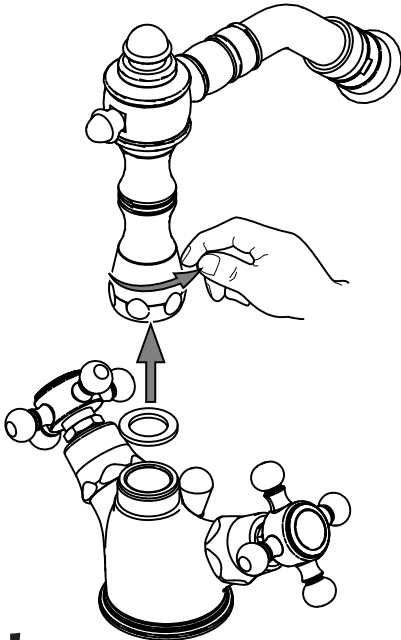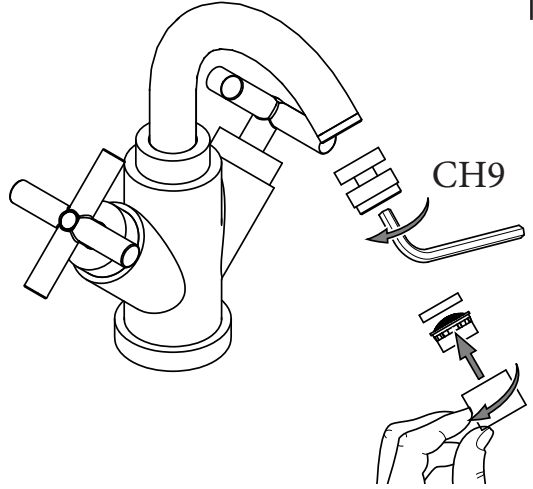**d**

Sostituzione Canna  
How to replace Spout

**e**

QTV

